

# Remote Controller

## Introduction of Remote



**POWER:** Press to turn on/off.



**MUTE:** Press to turn down the volume.



**SETUP:** Fast key to go to system setup.



**SEARCH:** Fast key to go to website search.



**ZOOM:** Press to zoom in/out when reading photos.



**SUBTITLE:** Press to choose subtitles when playing movies.



**AUDIO:** Press to choose audio output when playing movies.



**PHOTO:** Fast key to go to photo gallery.



**MUSIC:** Fast key to go to music playlist.



**FILE:** Fast key to go to file menu.



**VIDEO:** Fast key to go to video playlist.



**NETWORK:** Fast key to go to network function menu.



**ANDROID:** Fast key to go to android application.



**MENU:** Press to choose function menu of corresponding application in video, music, photo and website.



**PAUSE:** Press to pause when playing video, music or photo.



**STOP:** Press to stop playing.



**RETURN:** Press to return back to previous menu.



**HOME:** Fast key to go back to main menu.



**VOL:** Press to increase/decrease the volume.



**Navigation:** Press to navigate left/right/up/down. Press ok to confirm your choice.



**Fast backward or fast forward.**



**Go to previous page or next page.**

**Number keypad 0-9:** Press to input Arabic number.



**Backspace:** Press to backspace the input.



**Cursor:** Press to use the navigation button as cursor.